



LG K10 Middle Frame Replacement

This video shows you how to repair LG K10 broken,damaged,scratched middle frame.

Written By: Eric



Moto G4 Plus
Middle Cover
Repair Guide

INTRODUCTION

Wanna fix the plastic frame scratched problem of LG K10? Middle cover comes with loudspeaker power button flex, Wifi & Bluetooth antenna, camera cover assembly. Loudspeaker is not working? The signal of LG K10 is weak? LG K10 LTE power button not working? No sound from the LG K10? The power button is unresponsive?

If you encounter the above situations you may need to replace the front facing camera replacement for LG K10.

After a long time usage, problems may occur on the front camera of LG K10. DIY to fix it.

[video: <https://www.youtube.com/watch?v=mR1zruThmYc>]



TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [LG K10 Middle Frame Replacement](#) (1)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:10:00 AM.